

SUMITOMO RECOMMENDED PROCEDURE

SRP SP-F02-043

Pliable Ribbon Plenum Cable Preparation

<u>PARA.</u>	<u>CONTENTS</u>
1.0	General
2.0	Safety Precautions
3.0	Reference Documents
4.0	Tools Required
5.0	Sheath Removal
6.0	Fiber Unit Identification



SUMITOMO ELECTRIC LIGHTWAVE CORP.

201 South Rogers Lane, Suite 100, Raleigh, NC 27610

(919) 541-8100 or 1-800-358-7378

www.sumitomoelectric.com.com

SEL is a Member of the Sumitomo Electric Industries, Ltd. Group

Sumitomo Electric Lightwave reserves the right to improve or modify these specifications without notice.

1.0 General

This procedure describes the standard techniques for preparing Pliable Ribbon - Plenum fiber optic cable for placing and use in high density requirements where conduit space is limited. This cable passes the NFPA 262 burn test as required by the National Electrical Code (NEC) Section 770, and thus carries the Optical Fiber Non-Conductive Plenum (OFNP) rating. This cable also meets or exceeds the plenum cable requirements of ICEA 596 and Telcordia GR-4009-CORE, Issue 1. This product utilizes a single central buffer tube designed to accommodate up to twenty four 12 fiber pliable ribbons. Two layers of dielectric strength elements are stranded around the central tube to provide tensile strength. A flame retardant polyvinyl chloride jacket then covers the cable core.

2.0 Safety Precautions

2.1 The use of safety equipment is strongly recommended during the cable preparation procedure. This includes the use of protective clothing and eyewear.

2.2 To protect the hands, gloves are recommended when handling the fiberglass strength elements.

3.0 Reference Documents

SP-F01-002 Installing Cable Pulling Grip

SP-F01-002A Grip Addendum for Ribbon Cables

SP-F02-045 FreeForm Ribbon Matrix Removal Procedure

4.0 Tools Required

The following tools and materials are required to complete this procedure.

1. Tape Measure
2. Utility Knife
3. Electrician's Scissors
4. Marking Pen
5. Pliers
6. Gloves
7. Safety Glasses
8. UCTS-001 Universal Central Tube Slitter
9. Ripley's RCS-114 or RCS-158 Cable Stripper

5.0 Sheath Removal

5.1 End Access

This procedure involves opening a window in the sheath at the desired distance from the cable end, exposing the central tube, ring cutting the central tube and then sliding the tube, strength elements and jacket off to expose the optical fiber ribbons. Refer to step by step instructions below.

5.1.1 Measure and mark the appropriate length of cable to be cleaned back for the particular application (splicing: typically 8 feet).

5.1.2 Using the Ripley's RCS-114 or RCS-158 Cable Stripper, ring cut the jacket once at the mark and again approximately 12 inches towards the cable end.

5.1.3 Using the Ripley's RCS-114 or RCS-158 Cable Stripper, , make two longitudinal cuts along the sheath 180° apart between the two ring cuts. Using pliers, remove the two jacket halves between the ring cuts.

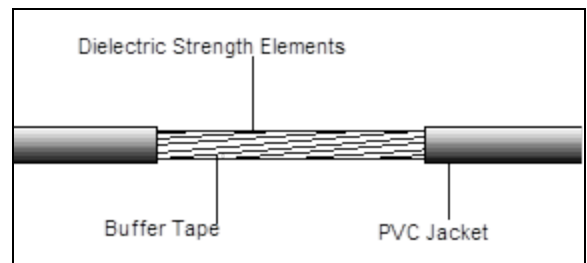


Figure 1

5.1.4 Midway along the exposed area, cut all of the dielectric strength elements with electrician's scissors. If required, be sure to leave enough rigid FRP tape length on the inside end for fixing in a closure or termination box (refer to appropriate procedures for necessary lengths).

5.1.5 Cut the buffer tape layer at both ends of the opened window and remove it to expose the tube underneath.

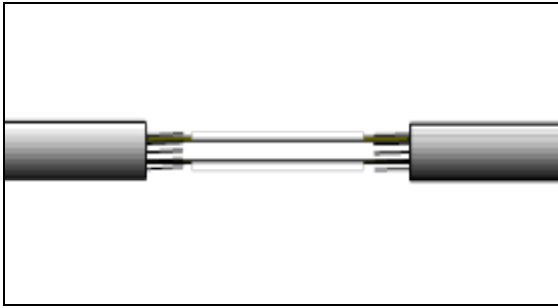


Figure 2

5.1.6 Since this cable construction contains no metallic elements, grounding is not necessary.

5.1.7 Using a standard buffer tube remover or coaxial cutter, ring cut the central tube leaving the appropriate length at the cable end (typically 2-4 inches). Score the tube, cutting ~3/4 of the way through the plastic. Avoid cutting completely through the plastic as this may damage the optical fiber ribbons. Bend the tube gently at the score to cleanly separate the tube.

5.1.8

Carefully slide the tube, strength elements and jacket off to expose the optical fiber ribbons.

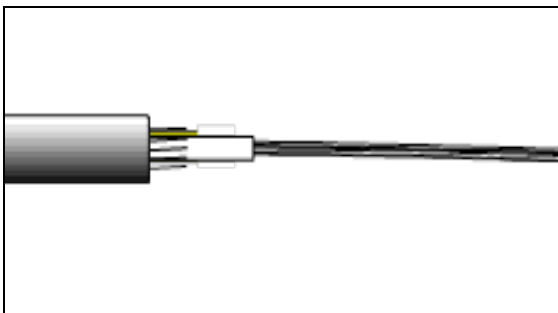


Figure 3

5.2 Mid-Span Access

5.2.1 Measure and mark the appropriate length (typically 8 feet) of the window to be opened in the cable for the particular application.

5.2.2 Using the Ripley's RCS-114 or RCS-158 Cable Stripper, ring cut the jacket at both marks and once more approximately 6 inches from one of the marks. Take care in not cutting too deeply for this may damage either the ripcords or central buffer tube below.

5.2.3 Using the Ripley's RCS-114 or RCS-158 Cable Stripper, make two longitudinal cuts along the sheath 180° apart between the 6 inch cut and the other cut. Using pliers, remove the two jacket halves between these ring cuts.

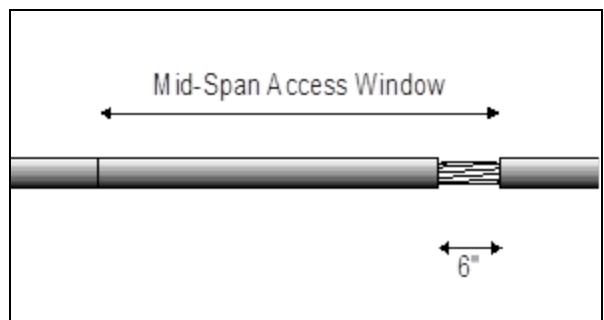


Figure 4

5.2.4 Using a blunt edged object such as the pliers, grab each ripcord located along the strength elements and slit open the remainder of the jacket between the two marks.

NOTE: Sometimes providing a notch in the jacket edge with the utility knife will help the ripcord get started. Remove the jacket between the two ring cuts.

5.2.5 Cut the strength elements at both ends of the window with the electrician's scissors. If necessary, leave enough rigid FRP tape length for anchoring the cable within a splice closure or termination box (typically 6 inches).

5.2.6 Choose appropriate UCTS-001 blade setting based on tube size below according to Table 1.

Fiber Count	ID/OD (mm)	Tube Slitter
12 - 132	4.8/6.8	UCTS-001 Dial Setting 2.05 Small Slitting Channel
156 - 276	7.3/9.1	UCTS-001 Dial Setting 2.10 Small Slitting Channel
288	8.8/10.8	UCTS-001 Dial Setting 2.25 Small Slitting Channel

Table 1

5.2.7 Adjust slitter's blade depth with supplied instructions. If the blades fully penetrate the tube wall, there is a chance of damaging the ribbon fibers. The correct dial gauge sets the blades' depth for the exact wall thickness.

NOTE: Always reset blade depth back to "0" setting when changing tube sizes. Always make a test cut before proceeding.

5.2.8 Make a longitudinal cut in buffer tube with slitter. Make sure to hold steady pressure on the UCTS tool to ensure that the tube is properly cut.

5.2.9 Carefully snip away both tube halves. An additional ring cut with the buffer tube remover can be made to obtain a smoother end.

5.2.10 The 12 fiber ribbons are now exposed and ready for mass splicing.

6.0 Fiber Unit Identification

6.1 Each ribbon contains individually color coded fibers that are held together by a matrix encapsulate. Individual ribbons can be easily removed from the stack and handled. Each ribbon has a unique marking code to provide unit identification.




FIBER TYPE MARKING (on ribbons)	
TYPE	CODE
Single Mode	SM


FIBER COLOR CODE	
FIBER #	COLOR
1	Blue
2	Orange
3	Green
4	Brown
5	Slate
6	White
7	Red
8	Black
9	Yellow
10	Violet
11	Rose
12	Aqua

6.2 To access individual fibers within a ribbon, please refer to Sumitomo Recommended Procedure SP-F02-045 Pliable FreeForm Ribbon Access Procedure.

See ribbon marking codes in **Table 2 - 3** next two pages.

RIB #	MARKING
1	1 bar
2	2 bars
3	3 bars
4	4 bars
5	1 Short Block
6	1 Short Block + 1 bar
7	1 Short Block + 2 bars
8	1 Short Block + 3 bars
9	1 Short Block + 4 bars
10	1 Long Block
11	1 Long Block + 1 bar
12	1 Long Block + 2 bars
13	1 Long Block + 3 bars
14	1 Long Block + 4 bars
15	1 Long Block + 1 Short Block
16	1 Long Block + 1 Short Block + 1 bar
17	1 Long Block + 1 Short Block + 2 bars
18	1 Long Block + 1 Short Block + 3 bars
19	1 Long Block + 1 Short Block + 4 bars
20	2 Long Blocks
21	2 Long Blocks + 1 bar
22	2 Long Blocks + 2 bars
23	2 Long Blocks + 3 bars
24	2 Long Blocks + 4 bars

<i>Marking Pattern</i>		
<i>1</i>	<i>5</i>	<i>10</i>
 <i>Bar</i>	 <i>"Short" Block</i>	 <i>"Long Block"</i>

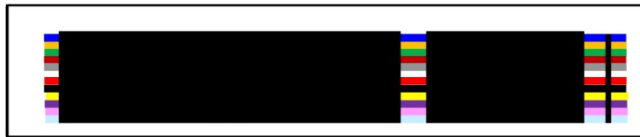

The Above Designates Ribbon #16 (1 Long Block, 1 Short Block, 1 Bar)